 


HUM 133

Eiki LCX-1 PROJECTOR

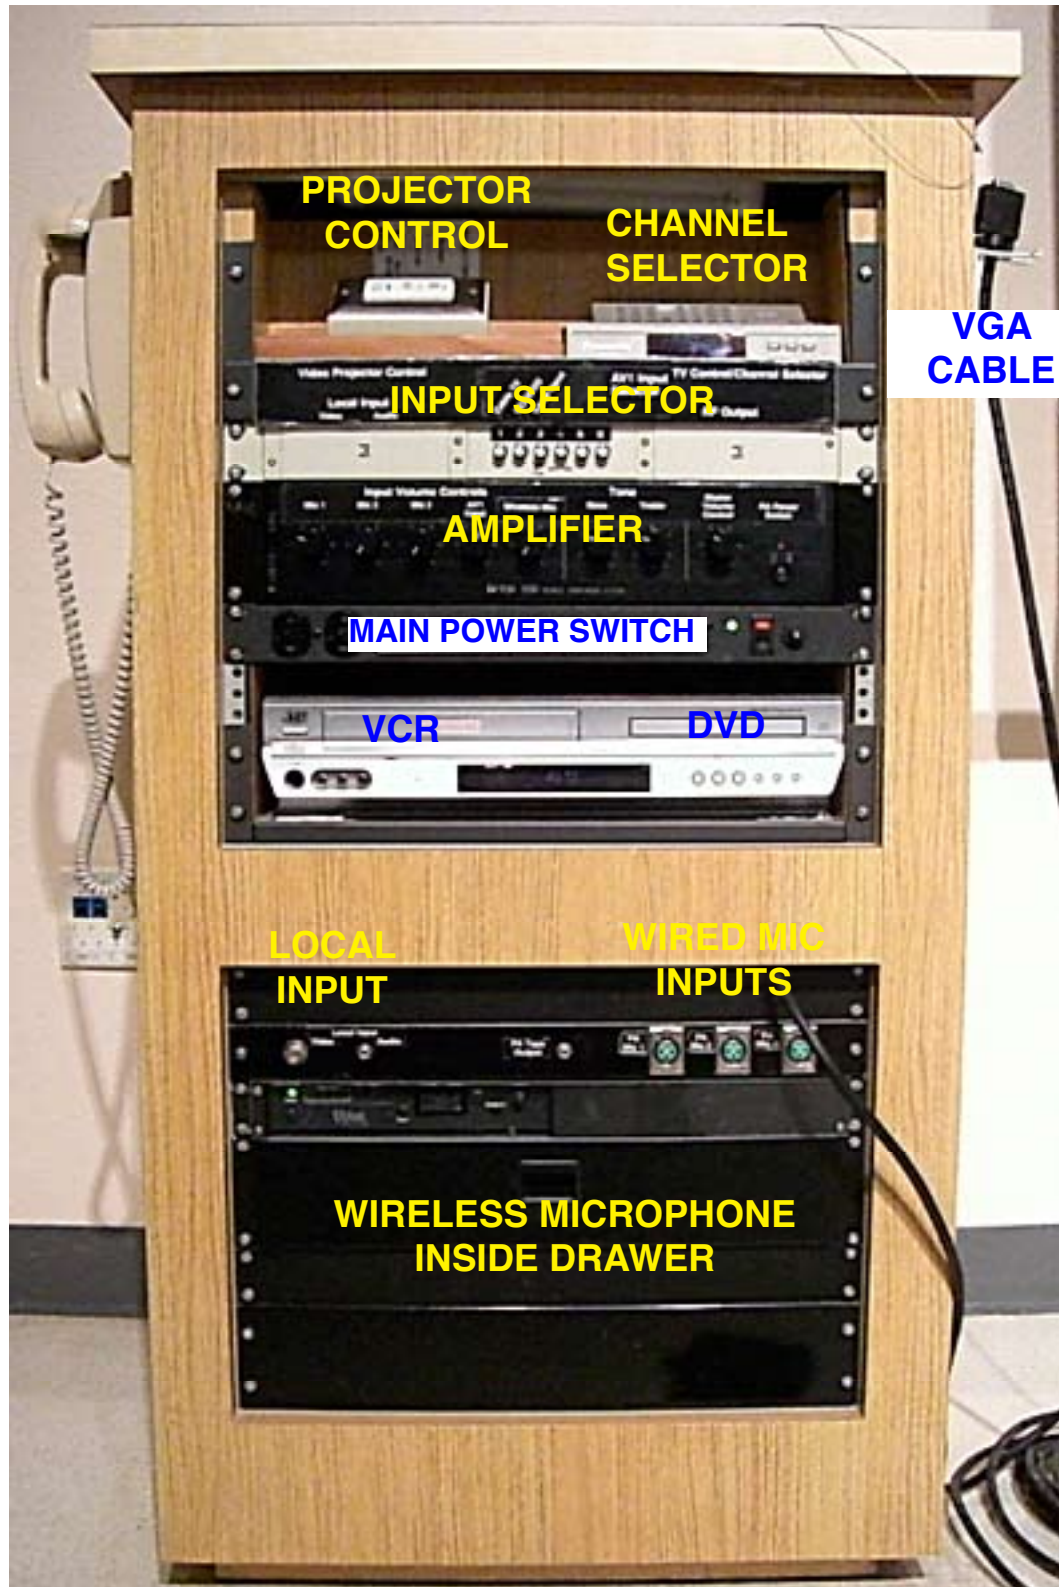

CABLECAST INSTRUCTIONS




Turn ON the MAIN POWER SWITCH located UNDER the AMPLIFIER.



Mounted on the front of the console is the projector control. Press the POWER button ONCE. The projector will take about 25 seconds to warm up.

On the same control, press the SOURCE button below the POWER button until VIDEO 1 appears on screen.

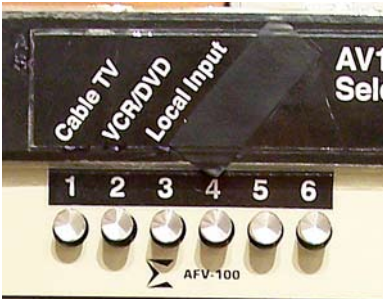

Locate a row of silver buttons on the front of the console labeled AV1 INPUT SELECTOR. Press the button marked CABLE TV.



Locate the AMPLIFIER (under the input selector). Press the PA Power Switch. Turn the Master Volume Control knob to 12 o'clock. Turn the AV1 Input Control knob to 9 o'clock.



Locate the CHANNEL SELECTOR mounted in the console. Press the ON button on the front. Enter your channel on the keypad. Do not touch the VOLUME or MUTE buttons on the channel selector. Call AV at 15103 to start your program.

TO SHUT DOWN: Press the POWER button on the Projector Control TWICE. Then turn OFF the MAIN POWER SWITCH.

VCR INSTRUCTIONS



Turn ON the MAIN POWER SWITCH located UNDER the AMPLIFIER.



Mounted on the front of the console is the projector control. Press the POWER button ONCE. The projector will take about 25 seconds to warm up.


On the same control, press the SOURCE button below the POWER button until VIDEO 1 appears on screen.



Locate a row of silver buttons on the front of the console labeled AV1 INPUT SELECTOR. Press the button marked VCR/DVD.



Locate the AMPLIFIER (under the input selector). Turn the Master Volume Control knob to 12 o'clock. Turn the AV1 Input Control knob to 9 o'clock.

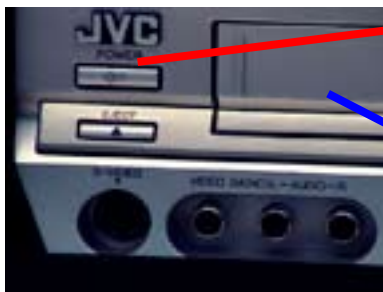

Press the POWER button on the VCR-
Insert your tape and press PLAY.



Remember to EJECT your tape before you leave.

TO SHUT DOWN: Press the POWER button on the Projector Control TWICE. Then turn OFF the MAIN POWER SWITCH.

DVD INSTRUCTIONS




Turn ON the MAIN POWER SWITCH located UNDER the AMPLIFIER.



Mounted on the front of the console is the projector control. Press the POWER button ONCE. The projector will take about 25 seconds to warm up.

On the same control, press the SOURCE button below the POWER button until VIDEO 1 appears on screen.

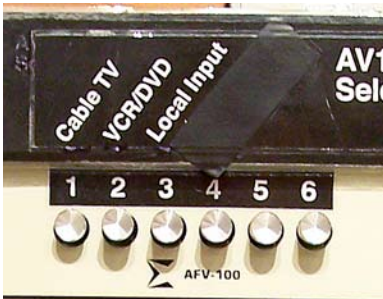

Locate a row of silver buttons on the front of the console labeled AV1 INPUT SELECTOR. Press the button marked VCR/DVD.



Locate the AMPLIFIER (under the input selector). Press the PA Power Switch. Turn the Master Volume Control knob to 12 o'clock. Turn the AV1 Input Control knob to 9 o'clock.



Press the POWER button on the VCR/DVD player-
Press the OPEN/CLOSE button.
Insert your DVD and press PLAY

Remember to EJECT your DVD before you leave.



TO SHUT DOWN: Press the POWER button on the Projector Control TWICE. Then turn OFF the MAIN POWER SWITCH.

CD INSTRUCTIONS




Turn ON the MAIN POWER SWITCH located UNDER the AMPLIFIER.



Locate a row of silver buttons on the front of the console labeled AV1 INPUT SELECTOR. Press the button marked VCR/DVD.



Locate the AMPLIFIER (under the input selector). Turn the Master Volume Control knob to 12 o'clock. Turn the AV1 Input Control knob to 9 o'clock.

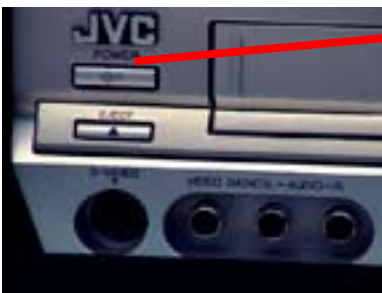

Press the POWER button on the VCR/DVD player-
Press the OPEN/CLOSE button.
Insert your CD and press PLAY



Remember to EJECT your CD before you leave.

TO SHUT DOWN: Turn OFF the MAIN POWER SWITCH.

LAPTOP INSTRUCTIONS

MAKE SURE YOUR LAPTOP IS TURNED OFF!

Turn ON the MAIN POWER SWITCH located UNDER the AMPLIFIER.



Mounted on the front of the console is the projector control.

Press the POWER button ONCE.

The projector will take about 25 seconds to warm up.

On the same control, press the SOURCE button under the POWER button until COMPUTER 1 appears on screen.

UP ARROW=NO SHOW: Press to black the projected image.
Press again to resume.



Locate the VGA connector on the back of your laptop.

Locate the black VGA cable attached to the right side of the console.



Line up the connector carefully and do not force the connection. There are very delicate pins inside and if damaged, they can corrupt the image on screen.

You can tighten the screws to secure the connection.
Be gentle, don't tighten them too tight.

TURN ON YOUR LAPTOP LAST.

If the computer image is cut off or jumping, press either AUTO PC ADJ button on the projector control box.

TO SHUT DOWN: Press the POWER button on the Projector Control TWICE.
Return the VGA cable to its hook. Turn OFF the MAIN POWER SWITCH.

COMPUTER AUDIO INSTRUCTIONS



Attached to the VGA cable is an audio (mini) cable. Plug it in to the headphone jack on your laptop. Make sure the volume is turned up on your laptop. Press the COMPUTER AUDIO INPUT button on the AV1 input selector and adjust the AV 1 INPUT CONTROL on the amplifier.

If you want to use your own computer with this console:

Please read and understand your computer's instruction manual, with particular attention to the section referring to "video mirroring" which allows the image on your laptop's screen to be "mirrored" by the projector. Some older computers cannot send the image to the projector and the laptop screen at the same time.

Always carry your laptop's manual and AC adapter with you.

There are hundreds of computer configurations currently available making this a task that must be individualized for your computer.

You may also arrange for an AV specialist to accompany you to your classroom for a run-through.

Please call 81494 for more information.

If you want to use the internet with your own computer READ THIS FIRST:

TO ACCESS THE INTERNET:

Wired: Use an RJ-45 ethernet cable (AV#C-10) to connect to the data jack in this room. No login required.

Wireless: Access is available in some SFSU classrooms. To connect, select "SFSU" from the list of available networks. Start your web browser. You will be redirected to a login screen. Use your SFSU email name and password.

Further information: <http://www.sfsu.edu/~helpdesk/wireless/> or call **338-1420**.

LOCAL INPUT INSTRUCTIONS

External Equipment (such as a Document Camera or Digital Video Camera) may be connected using the LOCAL INPUT Connections on the front of the console.

NOTES:

All AV Consoles use a BNC connector for video input. Make sure you have the proper connector or adapter to connect your video signal.

Turn ON the MAIN POWER SWITCH.




Mounted on the front of the console is the projector control. Press the POWER button ONCE. The projector will take about 25 seconds to warm up.

On the same control, press the SOURCE button below the POWER button until VIDEO 1 appears on screen.



Connect cables FROM your equipment TO the console's LOCAL INPUT.

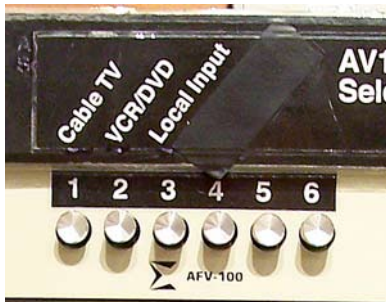

Press the Local Input Button on the AV1 Input Selector.



Locate the AMPLIFIER in the front of the console. Turn the Master Volume Control knob to 12 o'clock. Turn the AV1 Input Control knob to 9 o'clock.

TO SHUT DOWN: Press the POWER button on the Projector Control TWICE. Then turn OFF the MAIN POWER SWITCH.

WIRELESS MICROPHONE INSTRUCTIONS



Turn ON the MAIN POWER SWITCH located UNDER the AMPLIFIER.



The microphone is stored in a drawer in the console.
Unplug the microphone transmitter from the charging cable.
There is no spare battery or microphone.



Check the red switch on the top of the microphone is set to TALK.



Locate the AMPLIFIER.
Turn the Master Volume Control knob to 12 o'clock.
Turn the WIRELESS MIC knob to 9 o'clock.



Press and hold the POWER button on the front of the transmitter until you see the display turn on.

Clip the microphone to your lapel and the transmitter to your waist.

TO SHUT DOWN:

Press and hold the POWER button on the microphone until the display shuts off.

Place it back in the drawer and PLUG IT IN TO THE CHARGING CORD.

Slide the drawer back into the console and.
Turn OFF the MAIN POWER SWITCH.

WIRED MICROPHONE INSTRUCTIONS



Turn ON the MAIN POWER SWITCH located UNDER the AMPLIFIER.



Locate the AMPLIFIER (under the input selector).
Press the PA Power Switch.
Turn the Master Volume Control knob to 12 o'clock.
Turn the MIC 1 knob to 9 o'clock.



Plug the microphone cable inside the podium into the MIC 1 jack. Adjust the volume using the MIC 1 knob on the amplifier.
Be aware that the volume is louder to the audience than it is on stage.

TO SHUT DOWN: Turn OFF the MAIN POWER SWITCH.

TROUBLESHOOTING INFORMATION

No image through the projector:

Can you see a blue light coming from the projector? (If not, the projector is not on)
Is the projector using the correct SOURCE (Video 1 for Video or Computer 1 for Laptop)?

If you are using equipment in the console (Cablecast, VCR/DVD, Local Input) is the proper button on the AV1 INPUT SELECTOR pressed?

If you are using the VCR/DVD player, make sure there is a small green light under the unit you are using. If not, press the VCR/DVD button in the middle of the player until the green light comes on.

If you are using a computer, check that the VGA cable is connected to your laptop securely.

No Sound:

Is the Amplifier on? Look for a red light over the POWER BUTTON on the right side.

Is the Master Volume at 12:00 and the AV1 Input Control at 9:00 or higher?

If you are using equipment in the console (Cablecast, VCR/DVD, Local Input) is the proper button on the AV1 INPUT SELECTOR pressed?

Is there audio on the tape?

Is the volume up on your laptop?

The computer image is cut off on one side or jumping:

Press either AUTO PC ADJ button on the Projector Control.

If that does not work, restart the LAPTOP.

Can't log on to the internet:

Your ethernet cable may not be working. You may check one out from AV.

Faculty must come to the AV Center to sign for the cable.

Your computer is not configured properly to log on to the network.

Please go to Computing Services in ADM 110 for assistance.

The server may be down.

The wall jack in the room may be down.

Call 81494 to have someone come out and check it. No quick fix available.

If these steps do not work, **call ext. 81494** for assistance.